



Taylor Made
PRODUCTS™

TWO BOW BIMINI TOP ASSEMBLY INSTRUCTIONS

Our tops come to you with everything you need (except tools) to complete installation. This job is best accomplished with two people.

Contents:

| Quantity | Items |
|----------|---------------------------------------|
| 2 | Center Bows |
| 1 | White Marine Vinyl Top |
| 4 | Adjustable Tie Down Straps (CC strap) |
| 1 | Hardware Mounting Kit * |
| 4 | Side Mounting Tubes |


*Contents of Hardware Kit:

| Part Number | Quantity | Description |
|-------------|----------|--------------------------------------|
| 117800 | 2 | Black Nylon Flat Deck Mount |
| 281203 | 2 | Black Nylon Side Deck Mount |
| 118200 | 4 | Eye-Strap black |
| 906600 | 8 | 5/8" Phillips Head Screw |
| 909100 | 4 | 3/4" Phillips Head Self Taping Screw |


Note: *The hardware mounting kit comes with both vertical and horizontal mounting hinges. The type of hinge you choose depends on the kind of boat you have and where your mounting the top.*

Tools Required:

- #2 Phillips Head Screwdriver
- Regular Flathead Screwdriver
- Drill

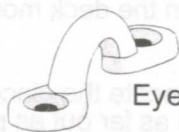

Eye Strap

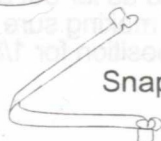


Snap Button



Flat Deck Mount



Jaw Slide

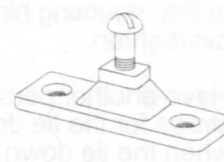


Side Deck Mount

PART 1 - ASSEMBLY BEFORE FITTING TO BOAT

Assembly begins by laying out the frame on the ground or other suitable flat surface and putting it together with the top. A strait screw driver will be needed.

1. Layout the top itself (white side down) on the ground. Then lay out the center Bows in their relative locations.
2. Slide one of the center bows into the sewn in pocket in the top, starting in the stern (see label).
3. Locate (1) of the Tie Down Straps and slide the "Loop" end of the strap over the center bow as it is positioned by the cut-out area in the pocket. Repeat for a second Tie Down Strap over the center bow through the next cut-out in top.
4. Repeat step #3 for the other center in the front of the top, using two more straps.
5. Slide the end of the center bow into (1) side mounting tube.
NOTE: Twist tubes slightly as you assemble them to ensure they snap together properly. If holes don't line up twist tube.
6. Repeat assembly of remaining (3) side mounting tubes to the center bows.
7. You now need to assemble the jaw slides on to the rear facing them to the front. (Mount jaw slide just above the crimpe eye end.
8. Assemble the Bow (front) tubes to the Jaw Slides on the stern tubes by removing the screw from the Jaw Slide, insert eye end into center of Jaw Slide and replace screw. Secure but NO NOT over tighten.

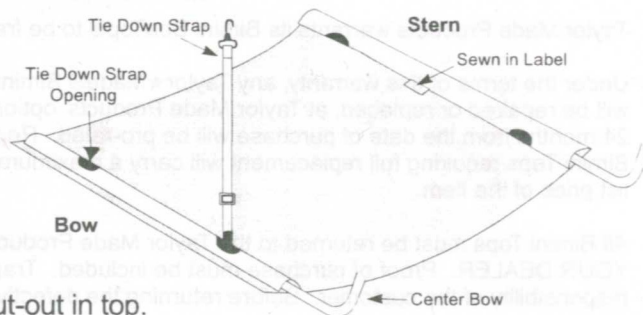

- Insert side tube into center bow, compress snap buttons to lock sections together.

