


SUPPORT BAR INSTALLATION SHEET

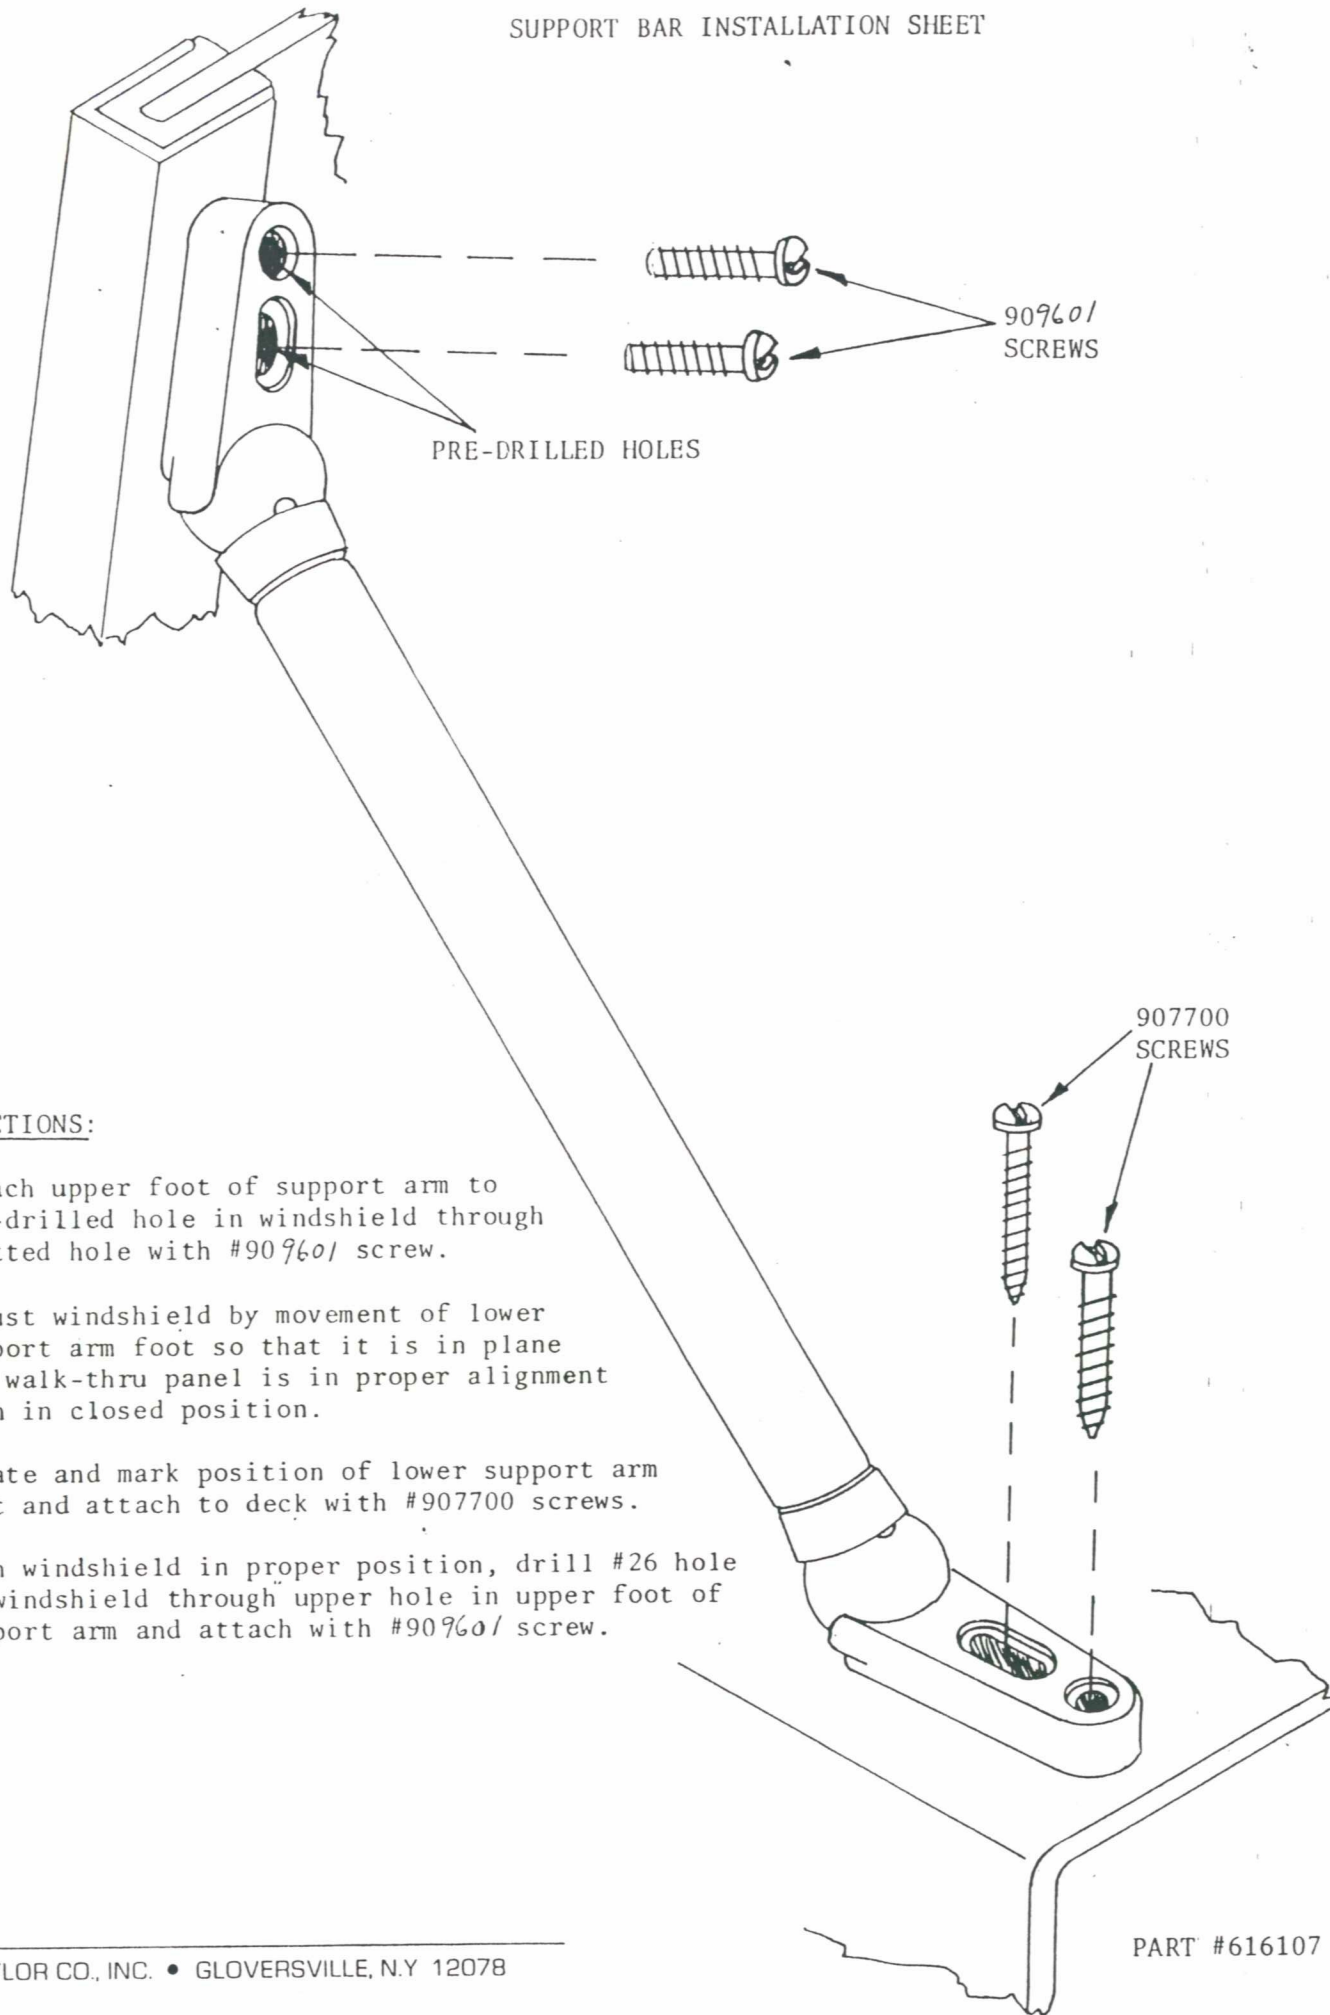

INSTRUCTIONS:

1. Attach upper foot of support arm to pre-drilled hole in windshield through slotted hole with #909601 screw.
2. Adjust windshield by movement of lower support arm foot so that it is in plane and walk-thru panel is in proper alignment when in closed position.
3. Locate and mark position of lower support arm foot and attach to deck with #907700 screws.
4. With windshield in proper position, drill #26 hole in windshield through upper hole in upper foot of support arm and attach with #909601 screw.